
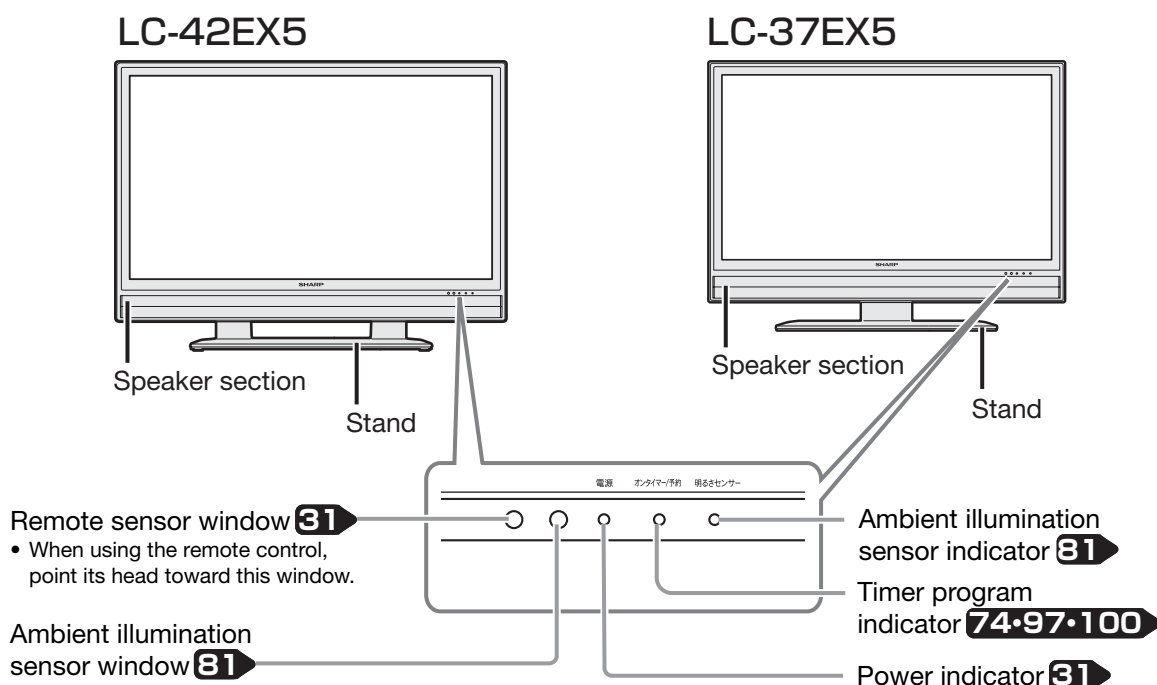


- The number shown in each  is the page number where the part's function and/or use are explained in Japanese.


Front view



Adjusting the LCD panel angle "LC-37EX5 only"


- The LCD panel can be tilted up to 2° forward, up to 6° backward and rotated horizontally up to 10° clockwise and counter-clockwise.
- Hold the stand firmly when you adjust the monitor's angle.

Side view

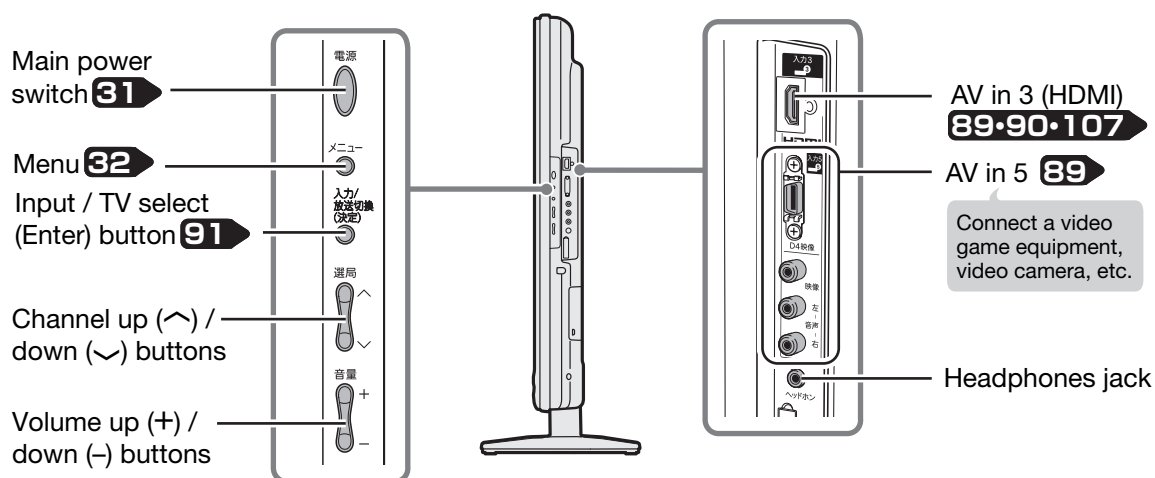

Back view

The illustrations below are those of LC-42EX5.
LC-37EX5 has the same layout of jacks and terminals as.

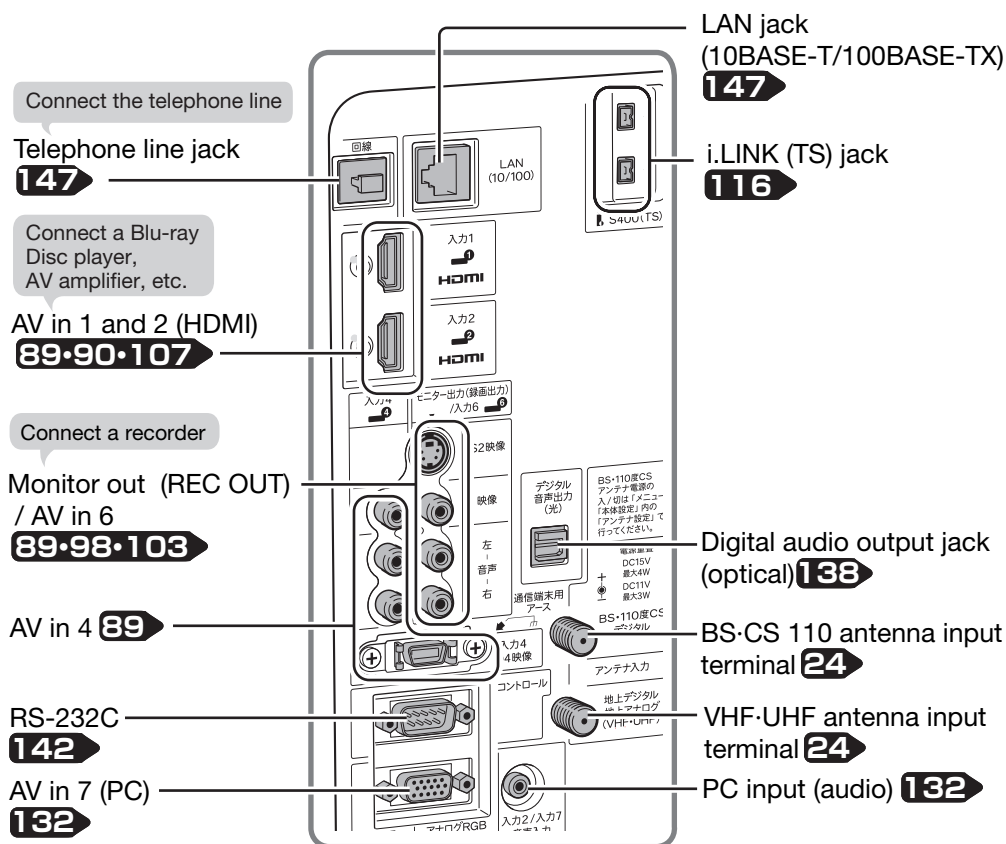

B-CAS card slot **21**

Connect the AC cord

AC cord connector **26**
(AC 100V)

Part Names – Remote Control Unit

Display **57**

Press to display or turn off the channel call, etc.

Active/Standby **31**

Press to engage the TV set in the active or standby mode.

CATV **58**

When selecting a CATV channel by entering the channel number, press this button first, then enter the 2-digit number with the TV channel select buttons (1-10/0).

Terrestrial analog select **56**

Terrestrial digital select **56**

BS select **56**

CS select **56**

Select the CS digital channel for the first time. **30**

(d) (linked data broadcast) **71**

Press to call the data broadcast linked with the current digital TV program.

Volume up (+)/down (-)

Press to adjust the volume.

Mute

Press to temporarily turn off the sound. Press again to return the sound volume to the previous level.

Program info **70**

Press to display detailed information on the current digital program.

EPG **62**

Press to display or turn off the Electronic Program Guide (EPG: 番組表) when receiving a digital broadcast.

Other on-air programs **63**

Press to display the EPG for currently on-air programs only (裏番組).

Finish **32**

Press to finish menu operation, etc.

* This button can be conveniently used when you are at a loss during menu or EPG operation, etc.

Screen mode **78**

Press to select the desired screen mode.

AV mode select **30**

Press to select the picture/sound setting that best matches the current program.

Freeze **70**

Press to freeze the picture.

i.LINK **118**

Press to display the i.LINK control panel.

Favorite channel select/register **59**

Press to select a user-registered channel and to turn on/off the favorite channel register/registered channel table screen.

Familink **106**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

オフタイマー

Sleep timer **128**

Press to select the desired remaining time period after which the TV set is automatically turned off and enters the standby mode.

3桁入力

Digital channel number input **58**

Use to select a digital channel by entering the 3-digit channel number.

Familink **106**

Press to operate "Familink" Recorders and AQUOS Surround connected via HDMI cables.

Channel select **56**

- Press to select a channel.
- Use to input a number for various settings.

選局

Channel up (^)/down (v) **56**

Press to select channels in the current network, media and CATV channels in the ascending or descending order.

* CATV channels are factory set to be skipped.

テレビラジオ/データ

Media select **56**

Press to select the desired media (TV, radio, or data).

入力切替

Input select **91**

Press to select the desired input.

Menu **32**

Press to display or turn off the menu screen.

*The menus can be displayed in English. See **183** for instructions on how to switch the display language.*

Cursor (up, down, left, right) **32**

Use to select a menu item, column, etc.

決定

Enter/Confirm **32**

Press to confirm a selected setting or menu item.

Return **32**

Press to go back to the previous screen. Press this button instead of the Enter/Confirm (決定) button when you have selected the wrong item or input the wrong number, etc.

Color **64 • 65 • 71**

Use to operate EPGs and data program screens.

映像切替

Picture select **69**

Press to select the desired picture when watching a digital multi-picture program.

字幕

Caption **69**

Press to display, select, or turn off captions when watching a digital program with captions.


音声切替

Audio select **68 • 69**

Press to select the desired audio.

To open the cover

Hold the cover by the projections on both sides and lift upwards.

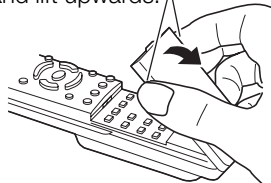

Switching the Display Language to English メニューなどの言語を英語にするには

- Using the menu screen, you can switch the on-screen display language to English.

メニューなどの画面表示を英語にすることができます。



★ おしらせ

誤ってメニューを英語にしてしまったときは

- ・メニューから「Setup」－「言語設定 (Language)」を選んで決定し、「日本語」を選んで決定すると日本語になります。

- Press**
メニュー

1 Display the menu screen.
メニューを表示する
- 2** Select “本体設定”(Setup) — “Language (言語設定)”.

「本体設定」－「Language (言語設定)」を選ぶ

Enter.
決定する

本体設定 ... Language (言語設定)


音声調整 省エネ設定 本体設定 機能切換

かんたん初期設定	
地域設定	
チャンネル設定	
アンテナ設定	
スピーカー設定	
入カスキップ設定	
位置調整	
○ オートワイド	
映像反転	[しない]
クイック起動設定	[しない]
Language (言語設定)	[日本語]
時計設定	
リモコン番号設定	[リモコン番号1]
個人情報初期化	

- 3** Select “English”.

「English」を選ぶ

Enter.
決定する

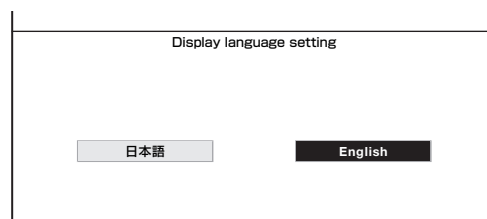

- The menu screen is now displayed in English.

画面表示が英語になります。

- 4** 終了

Finish this operation.
終了する